


MAIN FUSE
BOX (M/B)

B: **B143**
C: **F35**
E: **F36**

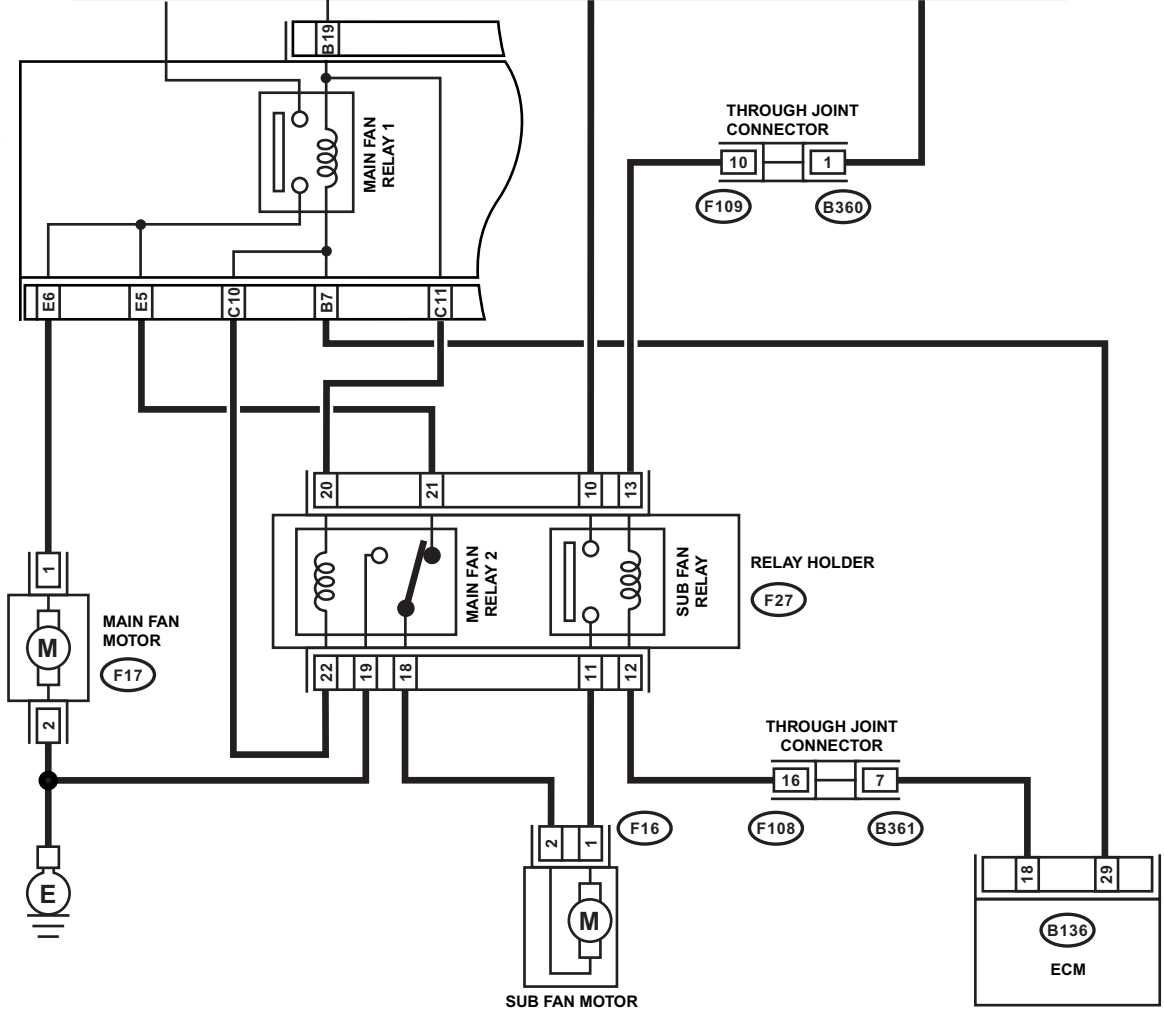


 
 
 
 
B361

B360

F108

F109

F27

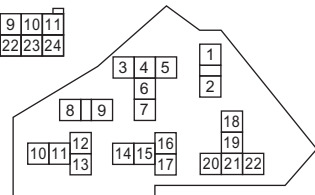

B: **B143**

C: **F35**

E: **F36**

