

- KA** : KA MODEL
EK : EXCEPT FOR KA MODEL
OP : WITHOUT PUSH BUTTON START
WP : WITH PUSH BUTTON START
***1** : TERMINAL No. OPTIONAL ARRANGEMENT
***2** : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 1, 2, 3, 4, 5 AND 6
***3** : WITHOUT PUSH BUTTON START : BW
 WITH PUSH BUTTON START : YR

