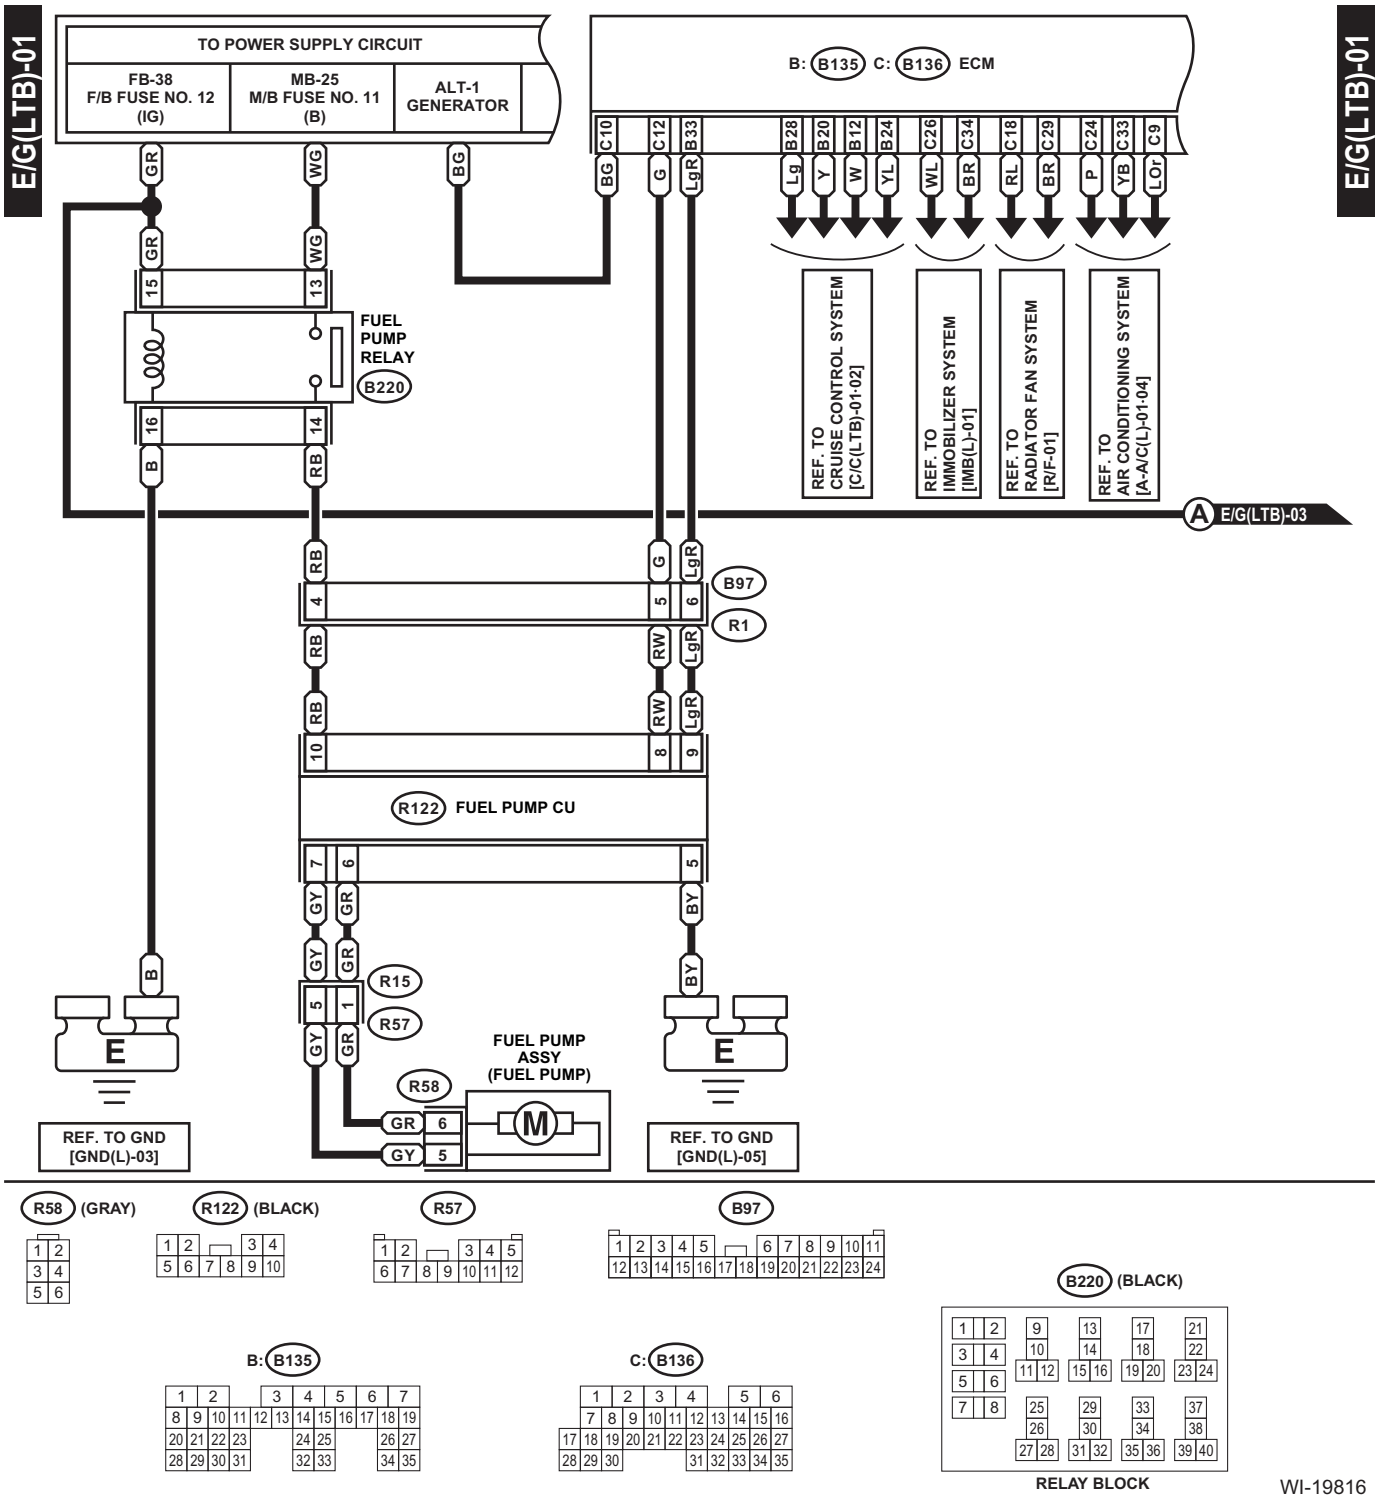
E/G(LTB)-01
TO POWER SUPPLY CIRCUIT
FB-38
F/B FUSE NO. 12
(IG)
MB-25
M/B FUSE NO. 11
(B)
ALT-1
GENERATOR
B: B135 C: B136 ECM
FUEL PUMP RELAY
B220
REF. TO CRUISE CONTROL SYSTEM [C/C(LTB)-01·02]
REF. TO IMMOBILIZER SYSTEM [IMB(L)-01]
REF. TO RADIATOR FAN SYSTEM [R/F-01]
REF. TO AIR CONDITIONING SYSTEM [A-A/C(L)-01·04]
A E/G(LTB)-03
B97
R1
R122 FUEL PUMP CU
R15
R57
R58
FUEL PUMP ASSY (FUEL PUMP)
REF. TO GND [GND(L)-03]
REF. TO GND [GND(L)-05]
R58 (GRAY)
R122 (BLACK)
R57
B97
B: B135
C: B136
B220 (BLACK)
RELAY BLOCK
WI-19816