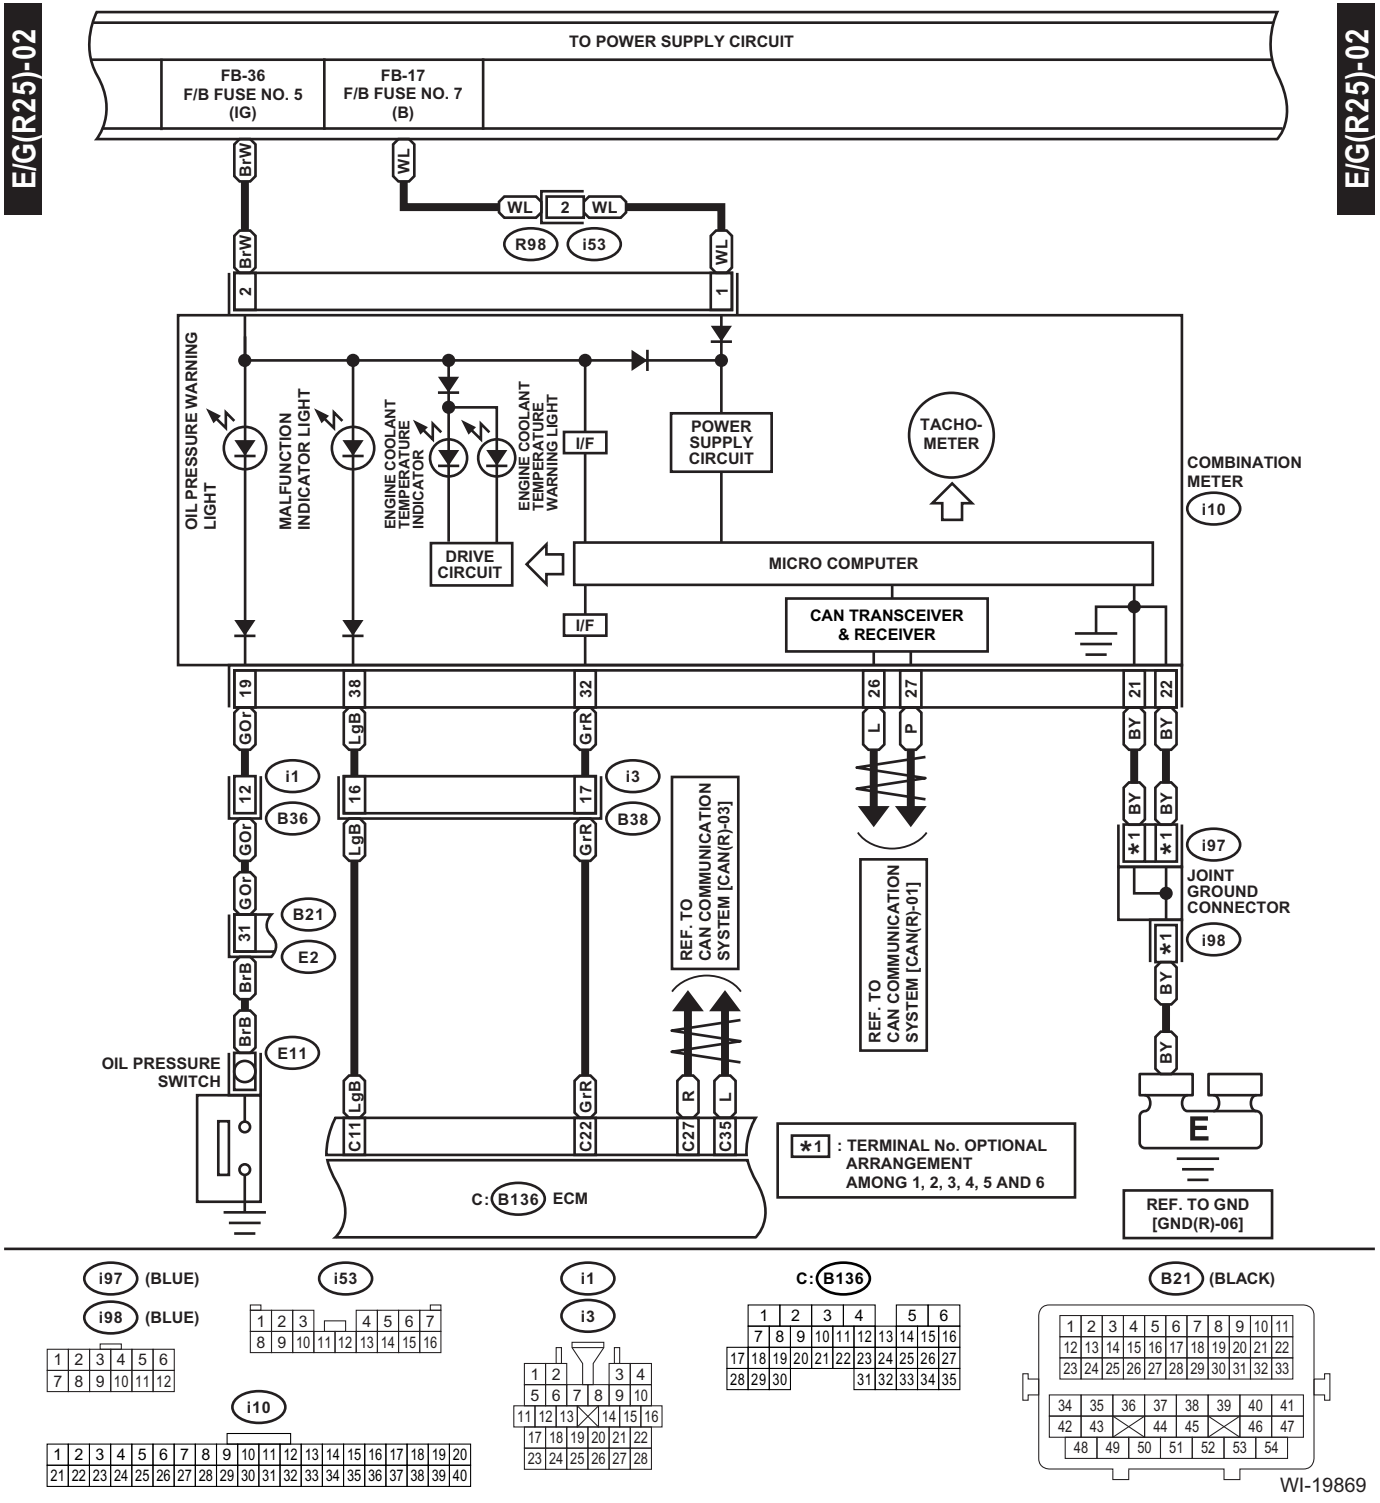
TO POWER SUPPLY CIRCUIT
FB-36
F/B FUSE NO. 5
(IG)
FB-17
F/B FUSE NO. 7
(B)
BrW
WL
R98
i53
OIL PRESSURE WARNING LIGHT
MALFUNCTION INDICATOR LIGHT
ENGINE COOLANT TEMPERATURE INDICATOR
ENGINE COOLANT TEMPERATURE WARNING LIGHT
I/F
POWER SUPPLY CIRCUIT
TACHO-METER
COMBINATION METER
i10
DRIVE CIRCUIT
MICRO COMPUTER
CAN TRANSCEIVER & RECEIVER
GOr
LgB
GrR
L
P
BY
i1
B36
i3
B38
i97
JOINT GROUND CONNECTOR
i98
B21
E2
BrB
E11
OIL PRESSURE SWITCH
REF. TO CAN COMMUNICATION SYSTEM [CAN(R)-03]
REF. TO CAN COMMUNICATION SYSTEM [CAN(R)-01]
C11
C22
C27
C35
R
C: B136 ECM
*1 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 1, 2, 3, 4, 5 AND 6
REF. TO GND [GND(R)-06]
i97 (BLUE)
i98 (BLUE)
i53
i1
i3
C: B136
B21 (BLACK)
i10
WI-19869