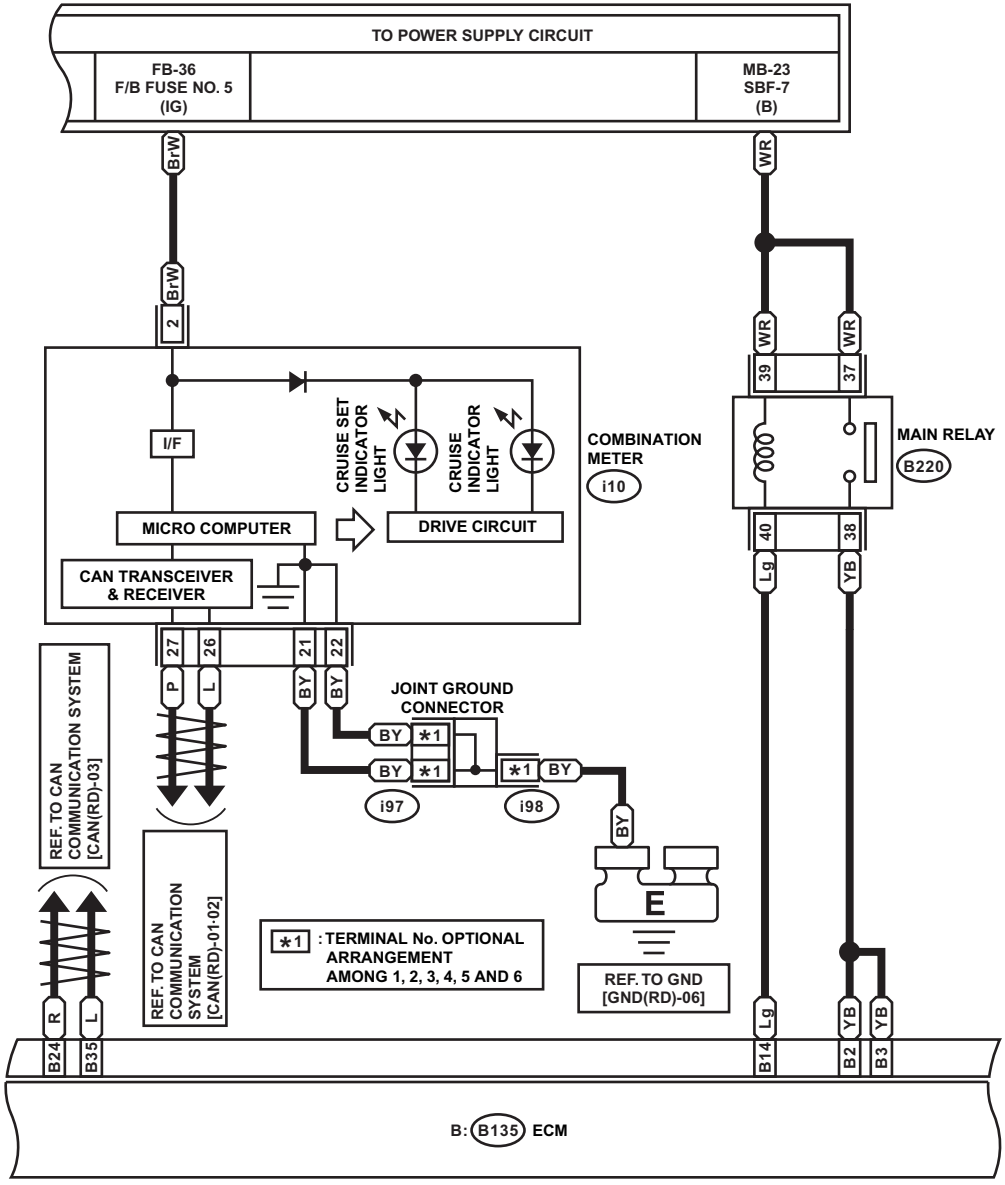
TO POWER SUPPLY CIRCUIT
FB-36
F/B FUSE NO. 5
(IG)
MB-23
SBF-7
(B)
BrW
WR
2
39
37
I/F
CRUISE SET INDICATOR LIGHT
CRUISE INDICATOR LIGHT
COMBINATION METER
i10
MAIN RELAY
B220
MICRO COMPUTER
DRIVE CIRCUIT
CAN TRANSCEIVER & RECEIVER
40
38
Lg
YB
27
26
21
22
P
L
BY
JOINT GROUND CONNECTOR
*1
i97
i98
REF. TO CAN COMMUNICATION SYSTEM [CAN(RD)-03]
REF. TO CAN COMMUNICATION SYSTEM [CAN(RD)-01-02]
*1 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 1, 2, 3, 4, 5 AND 6
E
REF. TO GND [GND(RD)-06]
R
B24
B35
B14
B2
B3
B: B135 ECM


i97 (BLUE)
i98 (BLUE)
1 2 3 4 5 6
7 8 9 10 11 12


B: B135 (BLACK)
1 2 3 4 5 6 7 8 9 10 11
12 13
14 15 16 17 18 19 20 21
22 23 24 25 26 27 28 29
30 31 32 33 34 35 36 37 38 39 40


i10
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20
21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40

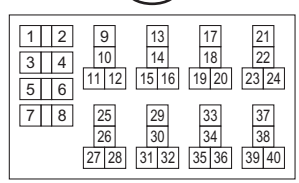
B220 (BLACK)
1 2
3 4
5 6
7 8
9 10 11 12
13 14 15 16
17 18 19 20
21 22 23 24
25 26 27 28
29 30 31 32
33 34 35 36
37 38 39 40
RELAY BLOCK